



HTEC GROUP

RD INSTALL GUIDE VIA TACHO

YOU WILL NEED:



**1 X H-TEC REMOTE
DOWNLOAD DEVICE**



**1 X PAIR OF TACHO
REMOVAL PINS**



1 X TACHO LOOM

INSTALLATION INSTRUCTIONS



PLEASE ENSURE THE VEHICLE'S IGNITION IS TURNED OFF BEFORE PROCEEDING WITH THE INSTALLATION




01

Insert the Tacho removal pins into each side of the tachograph and gently pull the Tachograph out.



04

Connect the H-TEC remote download device to the wiring loom. The device should then show some green lights.

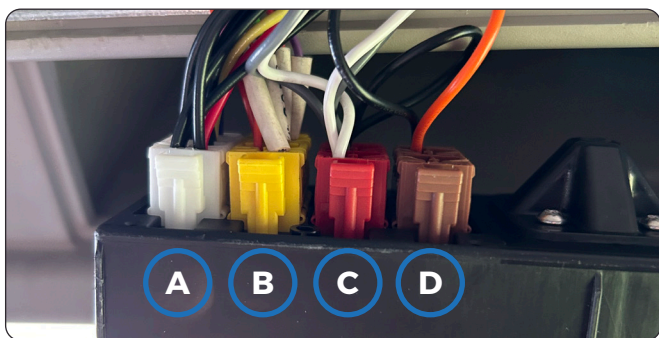

02


Remove the white (A), red (C) and brown (D) plug from the back of the tachograph and connect the plugs to the matching plugs on the H-TEC wiring loom (some vehicles may not have a red or brown plug)

05

Place the device and wiring loom in a secure place behind the tachograph and push the tachograph back into place. Ensure no wires are trapped when pushing the tachograph back into place.

06

Leave the device to start up for 10 minutes before starting the ignition

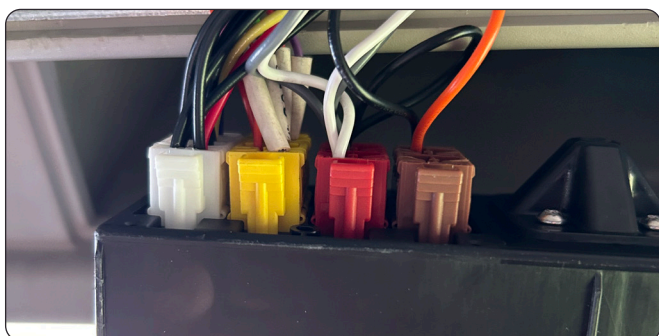

03

Connect the H-TEC wiring loom plugs into the back of the tachograph in the original order (if your vehicle doesn't have a red or brown plug, please still connect the H-TEC red and brown plugs into the tachograph)

NOTES:

- If any new warning lights appear on the dashboard, please check that all plugs are fully connected into the back of the tachograph. If all plugs are connected and warning lights still appear, please contact the support team at H-TEC.
- The tachograph may show a 'Power Interruption' and/or 'Sensor Fault' warning after the installation. Whilst this is normal after an installation, if the warning messages continue to appear, then please check all connections to make sure nothing has come loose.
- When installing, ensure both antennas are fastened hand-tight. Do not use a tool to tighten these antennas as this can damage the antennas/ device.